


**HBW**  
**INSTALLATION INSTRUCTIONS**  
**\_300-XXX (TUB ONLY)**  
**\_301-XXX (TUB, DIVERTER, & SHOWER HEAD)**  
**\_302-XXX (SHOWER HEAD ONLY)**

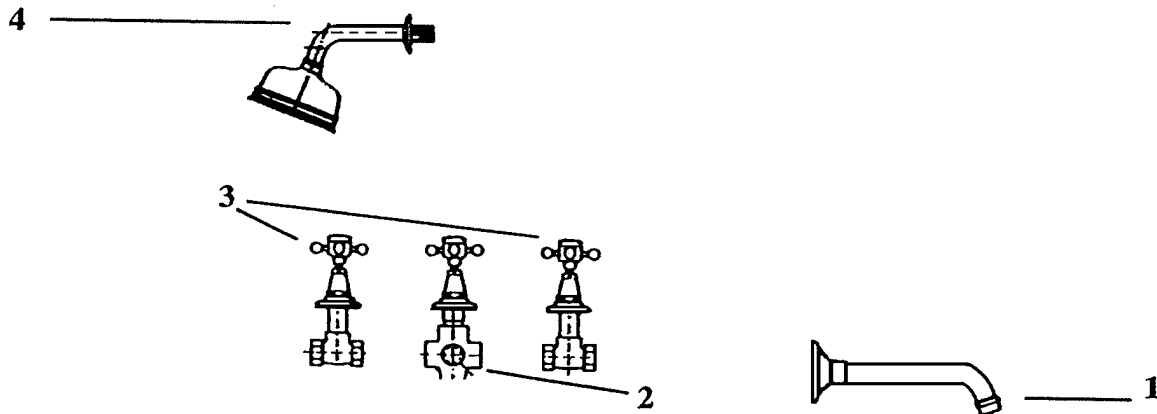


- Affix the spout to the wall (1).
- Remove the trim from the diverter (301 models) (2) and the hot and cold valves (3).
- Follow the rough in instructions supplied.
- Install the trim to the diverter and hot and cold valves.
- Assemble and install the showerhead (4).
- Remove the spout aerator and showerhead prior to flushing out the system.

**DO NOT USE PLUMBER'S PUTTY, USE CLEAR SILICONE.**

**XXX INDICATES A FINISH IS NECESSARY**  
**— INDICATES A SERIES NUMBER IS NECESSARY**

**PARTS**  
**-300-XXX (TUB ONLY)**  
**-301-XXX (TUB, DIVERTER, & SHOWER HEAD)**  
**-302-XXX (SHOWER HEAD ONLY)**

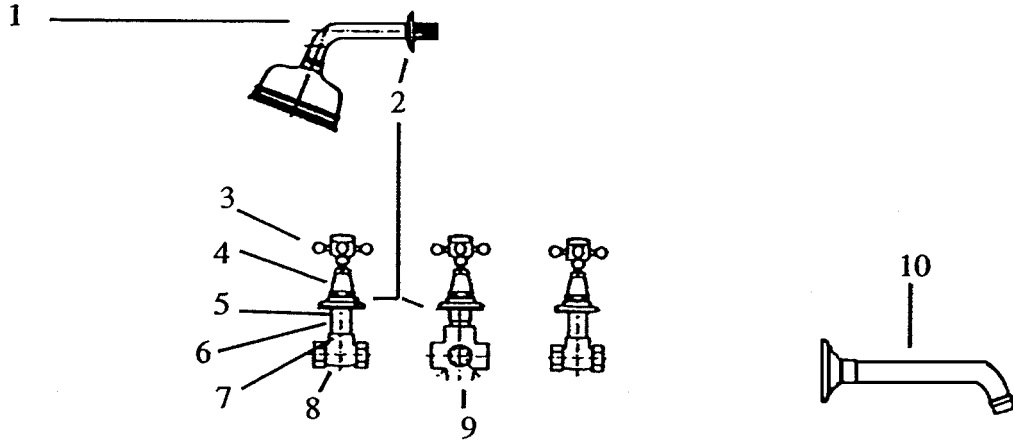

- |                  |                    |
|------------------|--------------------|
| 1. _-501-XXX     | 3-1/2" shower head |
| 2. _-80-041-XXX  | Sliding flange     |
| 3. _-80-012-XXX  | Handle             |
| 4. _-80-038-XXX  | Bell               |
| 5. 86-646BR-XXXM | Stem adapter       |
| 6. 86-645-ML     | Metal extension    |
| 7. 80-1302-000   | Cold cartridge     |
| 80-1302-010      | Hot cartridge      |
| 8. 80-373-000    | Cold valve         |
| 80-373-010       | Hot valve          |
| 9. 80-045-000    | 2-way diverter     |
| 10. _-350-XXX    | Wall tub spout     |

**XXX INDICATES A FINISH IS NECESSARY**  
**— INDICATES A SERIES NUMBER IS NECESSARY**