


HBW
INSTALLATION INSTRUCTIONS
_300-XXX (TUB ONLY)
_301-XXX (TUB, DIVERTER, & SHOWER HEAD)
_302-XXX (SHOWER HEAD ONLY)

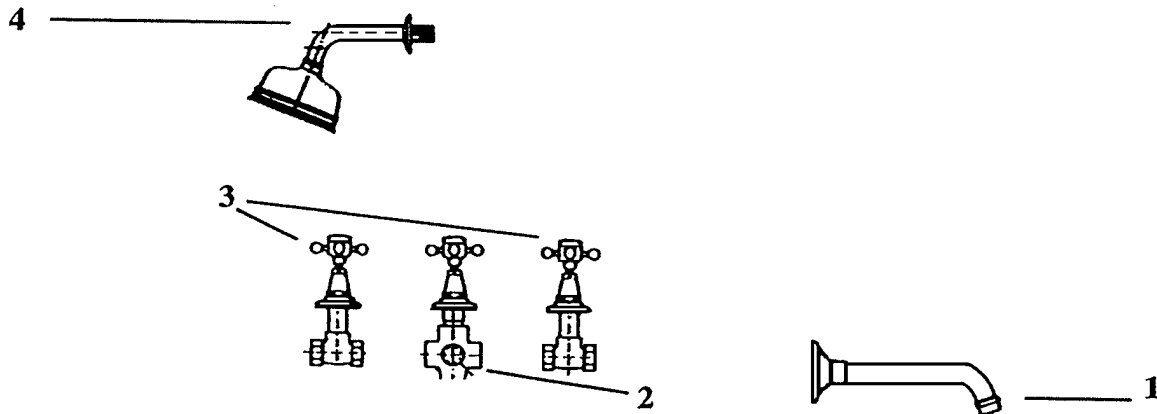


- Affix the spout to the wall (1).
- Remove the trim from the diverter (301 models) (2) and the hot and cold valves (3).
- Follow the rough in instructions supplied.
- Install the trim to the diverter and hot and cold valves.
- Assemble and install the showerhead (4).
- Remove the spout aerator and showerhead prior to flushing out the system.

DO NOT USE PLUMBER'S PUTTY, USE CLEAR SILICONE.

XXX INDICATES A FINISH IS NECESSARY
— INDICATES A SERIES NUMBER IS NECESSARY

PARTS
-300-XXX (TUB ONLY)
-301-XXX (TUB, DIVERTER, & SHOWER HEAD)
-302-XXX (SHOWER HEAD ONLY)

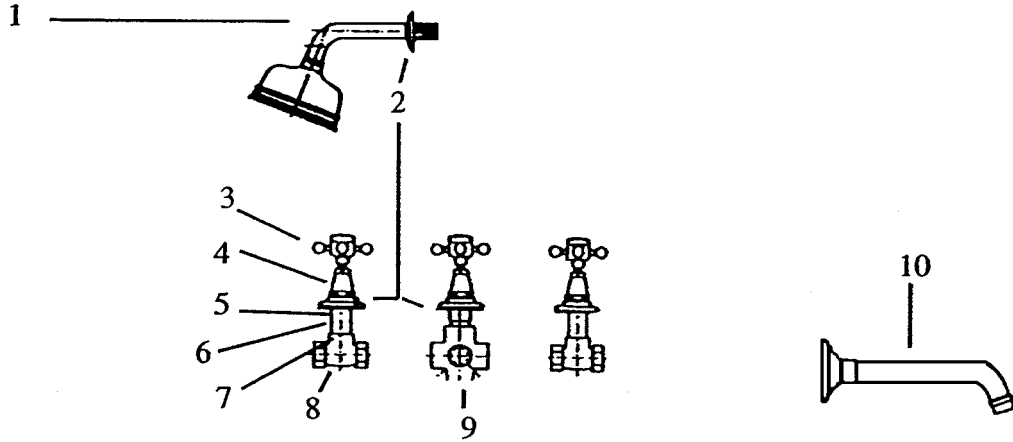

- | | |
|------------------|--------------------|
| 1. _-501-XXX | 3-1/2" shower head |
| 2. _-80-041-XXX | Sliding flange |
| 3. _-80-012-XXX | Handle |
| 4. _-80-038-XXX | Bell |
| 5. 86-646BR-XXXM | Stem adapter |
| 6. 86-645-ML | Metal extension |
| 7. 80-1302-000 | Cold cartridge |
| 80-1302-010 | Hot cartridge |
| 8. 80-373-000 | Cold valve |
| 80-373-010 | Hot valve |
| 9. 80-045-000 | 2-way diverter |
| 10. _-350-XXX | Wall tub spout |

XXX INDICATES A FINISH IS NECESSARY
— INDICATES A SERIES NUMBER IS NECESSARY